

IP KVM Matrix Extender

User Manual

www.kinankvm.com

@all right reserved Shenzhen Kinan Technology Co., Ltd

Print date: 2024 /07

Version: V2.1

User Information

Telephone Support

For telephone support, please call below number:

TEL	0086-755-26755041
MOBILE	0086-13714411566

User Notification

All information, documentation, and specifications contained in this manual are subject to change without prior notice. The manufacturer does not make any explicit or implied statement or guarantee about the contents of this document, especially for merchantability or fitness for any specific purpose. Any manufacturer's equipment described in this manual is sold or licensed as it is.

If the equipment is damaged artificially after purchase, the buyer (not the manufacturer, its distributor or reseller) shall bear all costs for necessary repair and any losses caused by equipment defects.

If the correct operating voltage setting is not selected before operation, the manufacturer will not be responsible for any damage caused by system operation.

Please make sure the voltage has been set correctly before use.

- User Information**..... 1
 - Telephone Support..... 1
- 1. Introduction**..... 3
 - 1.1 Function..... 4
 - 1.2 Feature..... 4
 - 1.3 Safety Instructions..... 4
 - 1.4 Product Overview..... 6
 - KFH251S receiver (RX)..... 6
 - KFH251S sender (TX)..... 7
- 2. Installation**..... 8
 - 2.1 Installation of Extender..... 8
- 3. Extender Configuration**.....13
 - 3.1 Use of UI Interface.....13
 - [Name Setting of TX_List]..... 14
 - [Auto Scan Setting]..... 15
 - [User Login Interface]..... 16
 - [The list of matched TX/RX]..... 16
 - 3.2 Function Setting.....17
 - [Equipment Info]..... 18
 - [Equipment Setting]..... 19
 - [Frame Push]..... 21
 - [Frame Get]..... 21
 - [Update]..... 23
 - [Hotkeys]..... 24
- 4. Specifications**..... 25
 - Specifications of KFH251S..... 25

1. Introduction

The KFH251S IP KVM matrix extenders are highly optimized KVM extenders. The point-to-point connection supports transmission distance of 120m, and resolution up to 3840x2160@30Hz. This series of extenders can be connected to an 1G network switch to form a matrix switching system, which supports point-to-point (P2P) mode and matrix (Matrix) mode. The matrix switching system composed of extenders supports up to 9999 nodes by using a centralized management software, and it can support up to 40 nodes without using a centralized management software. It can connect multiple signal sources (such as servers, workstations, cameras and video walls).

With the matrix switching system, computers and servers can be located in the central server room far from the workstation to improve security, reduce the temperature and noise of the working environment, and achieve a quiet and friendly human-computer interaction environment.

The video compression algorithm of KFH251S matrix extender is a perfect combination of high-quality image and low latency (<16ms). The USB and video signals are transmitted through CAT5e/6/7 network cable.

It supports USB devices such as touch screen, USB sound card, printer, etc., it can also support USB storage devices.

1.1 Function

This product is intended to be used as a device to increase the distance that a keyboard, monitor and mouse can be placed from a computer. This product is intended for professional use. The product should not be used in potentially explosive environments.

The product may only be used according to the instructions as described in this manual. All use, other than that described in this manual, is seen as unintended use. In this product, the product connected to the host end is called the transmitter (TX), and the product connected to the display end is called the receiver (RX).

1.2 Feature

- HDMI / USB2.0/Audio/Rs232 - IP KVM Matrix Extender
- Single and Dual screen version
- Point-to-point connection supports maximum extension distance 120m/394ft
- Can be connected to a standard network switch to form a matrix switching system
- Support seamless switching
- Freeze the last image after the disconnection of transmitter and receiver
- Support resolution up to 3840x2160@30Hz
- USB transmission rate up to 12MB/s
- HDMI lossless real-time full HD transmission
- Support local (TX) HDMI interface loop-out
- Support transmission through fiber optic and network (CAT5e/6/7)
- Support one Administrator account and one User account

1.3 Safety Instructions

WARNING! Read and understand all safety instructions.

- Please follow all instructions. This will avoid accidents, fire, explosions, electric shocks or other hazards that may result in damage to property and/or severe or fatal injuries. Please ensure that everyone who uses the product has read and followed these warnings
- Keep all safety information and instructions for future reference and pass them on to subsequent users of the product.
- The manufacturer is not liable for cases of material damage or personal injury caused by incorrect handling or non-compliance with the safety instructions. In such cases, the warranty will be voided.

-
- The product is not allowed to use in potentially explosive environments.
 - Check the product and the cables for any damage before use. If there is any visible damage, a strong odour, or excessive overheating of components unplug all the connections immediately and stop using the product.
 - If the product is not installed and used in accordance with this manual, it may cause disruptive interference with radio or television reception or affect other electronic products in residential areas.
 - Use shielded cables to connect components to avoid the above interference.
 - Only the power adapter included with the product should be used as the power supply. Do not use other adapters.
 - Make sure your local voltage matches the rating indicated on the product before powering on it.
 - The product must be connected to a permanent and earthed AC wall socket.
 - Protect cables from being strained, pinched or buckled and place them in a way to prevent people from tripping over the cord.
 - Avoid any damage to power adapter.
 - Use the product with a suitable, properly installed and easily accessible power socket to make sure the product can be disconnected from the power socket at all times.
 - Disconnect the product when not in use.
 - Never touch the adapter with wet hands.
 - Use the product within the specified performance limits.
 - Keep the product away from any flammable materials like curtains.
 - Protect the power adapter from use by third parties (particularly children).
 - Keep the product away from heater.
 - Do not drop or hit the product.

1.4 Product Overview

KFH251S receiver (RX)

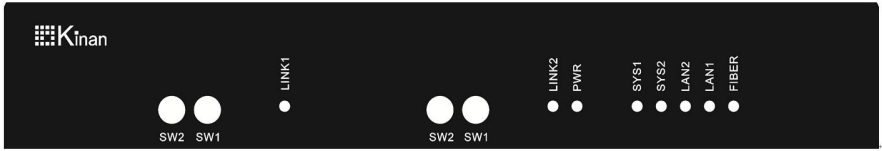






Table1.4:

No	Name	Function
1	FIBER	Fiber interface
2	LAN1	LAN1 interface
3	LAN2	LAN2 interface
4	HDMI OUT2	HDMI2 video output
5	HDMI OUT1	HDMI1 video output
6		Connect to a USB keyboard and mouse
7	USB2.0	Connect to USB2.0 peripherals
8		MIC input
9		Audio output
10	RS232	Serial Port
11	DC12V	Connect to the 12V power supply
12		Ground the device

KFH251S sender (TX)


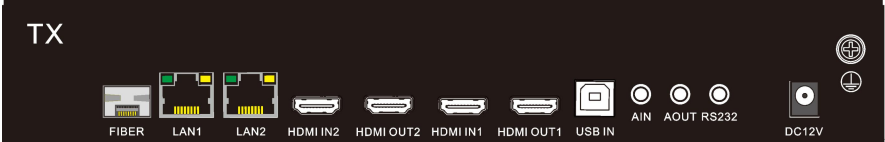

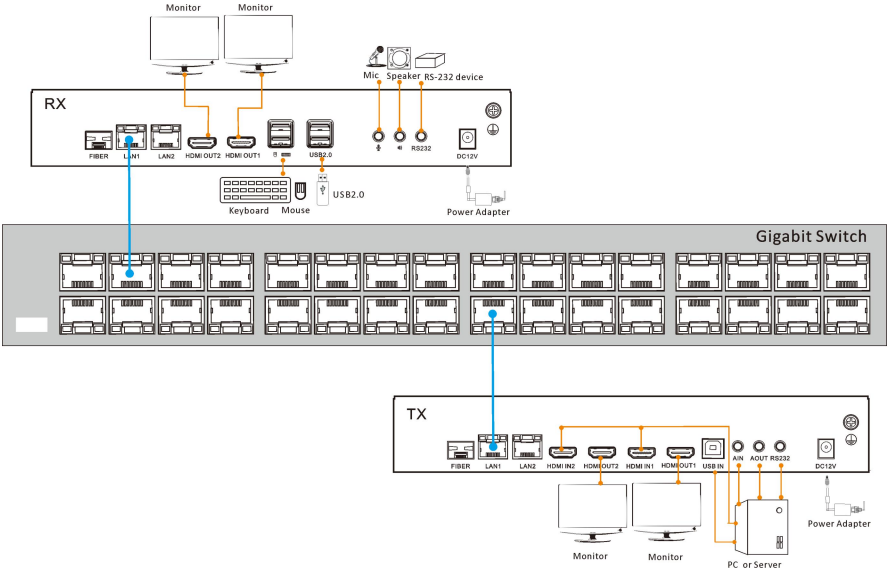


Table1.3:


No	Name	Function
1	FIBER	Fiber interface
2	LAN1	LAN1 interface
3	LAN2	LAN2 interface
4	HDMI IN2	HDMI2 video input
5	HDMI OUT2	HDMI2 video loop out
6	HDMI IN1	HDMI1 video input
7	HDMI OUT1	HDMI1 video loop out
8	USB IN	USB Type-B, connect PC or server
9	AIN	Audio input
10	AOUT	MIC output
11	RS232	Serial port
12	DC12V	Connect to the 12V power supply
13		Ground the device

Matrix Connection Diagram

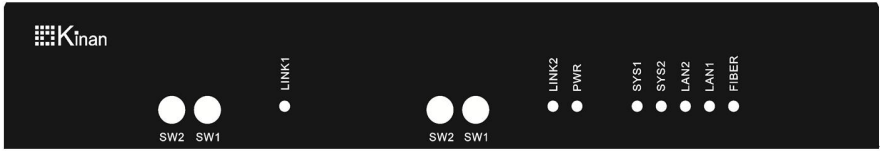


Configuration requirements: The electrical port of the network switch must reach a gigabit rate and support IGMP multicast.


Connected single transmitter (TX) to single receiver (RX)

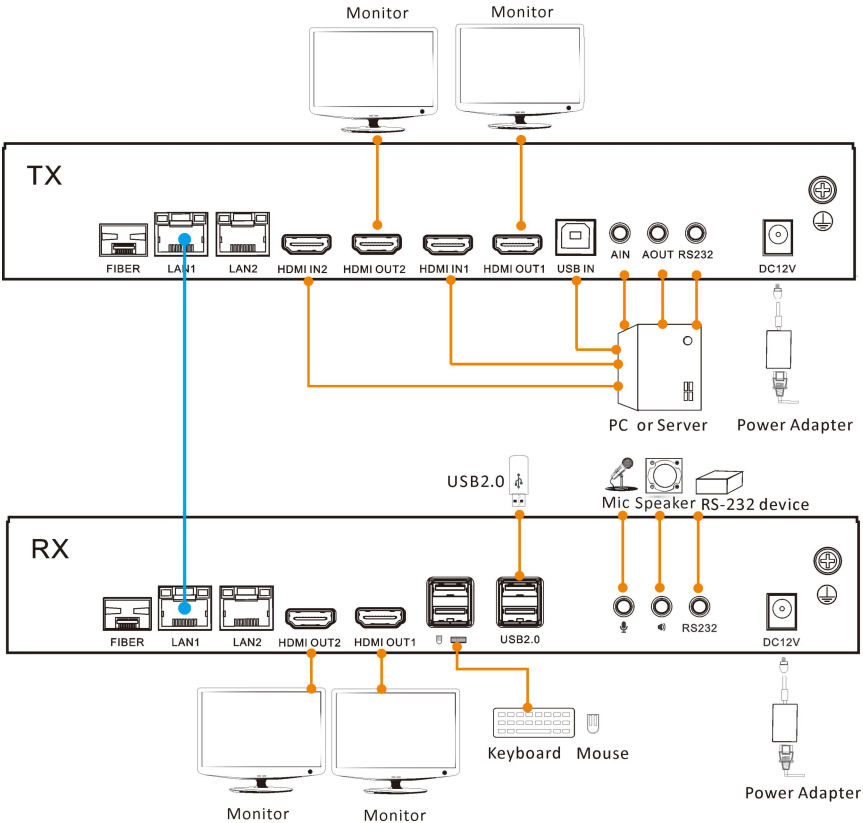

Connect single transmitter (TX) to multiple receivers (RX)

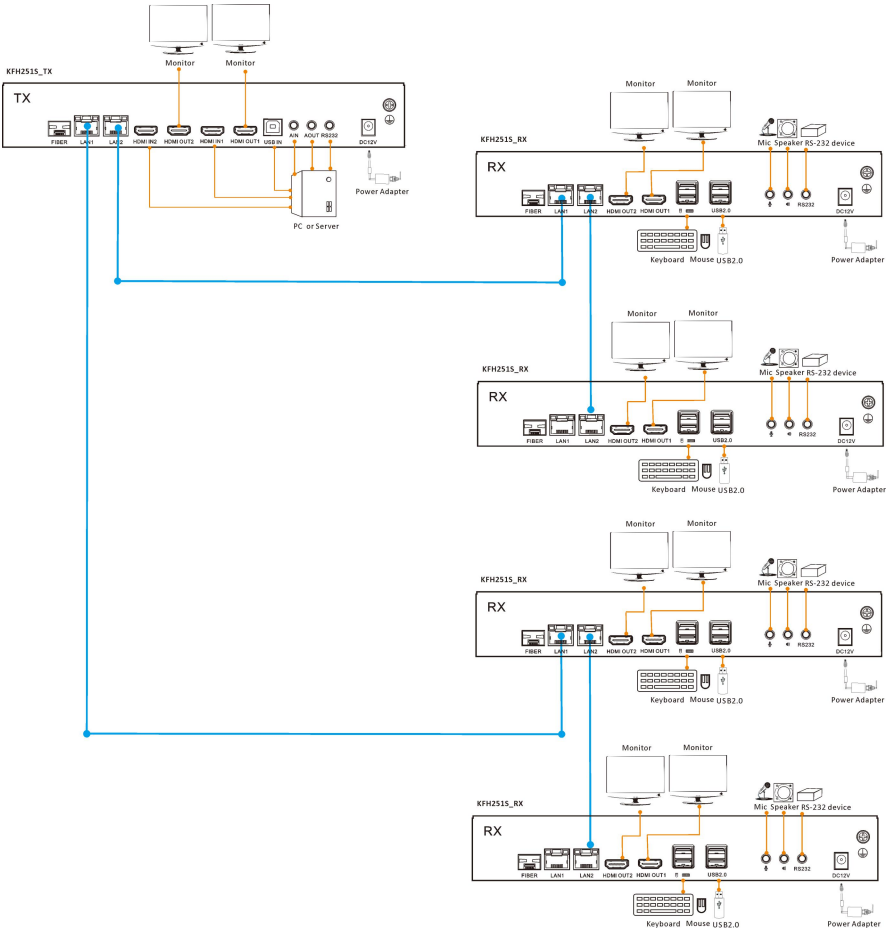

Connect multiple transmitters (TX) to single receiver (RX)

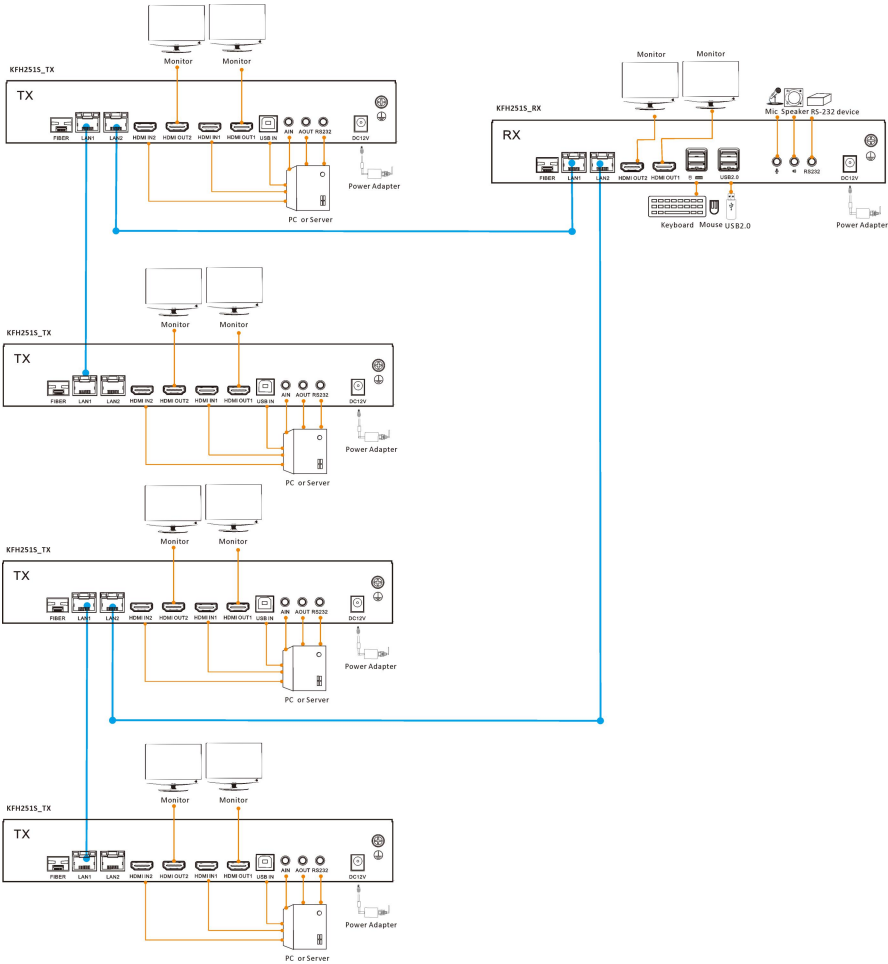







3. Extender Configuration

3.1 Use of UI Interface


Press the left [Ctrl] key on the keyboard 3 times continuously, then the main UI interface will display.




Function Name	Description
Mode	Node Matrix P2P
	Scan device list
	The list of matched transmitter and receiver
	Setting of function key
	Click 【Equipment setting】 - 【User Setting Pass】 to logout user account
SN	Number of connected devices
TX_List	List of transmitters
Status	Busy: TX and RX are paired --Busy-- : The RX has been connected to a TX No video: There is no video input from the host Connect: Can be connected
QV	Select Scan device
	Find the devices in the list
	Auto Scan


[Name Setting of TX_List]

Double-click the name of a TX, and then the following name setting window appears.

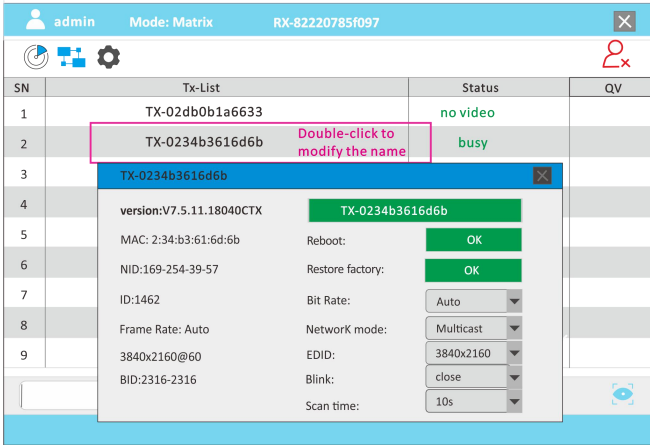

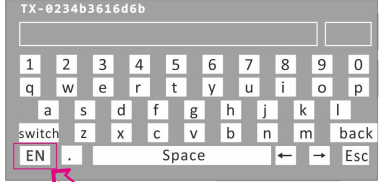



Function Name	Description
Modify the name of a TX	<p>Click “TX-0234b3616d6b ” to modify the TX name and then click “ESC” button to confirm your modification.</p>  <p>EN: English Version CN: Chinese Version</p>
Reboot	Reboot the device
Restore factory	Restore Factory Defaults
Bit Rate	Auto, 10M ,50M, 100M, 150M, 200M
Network mode	Multicast mode Unicast mode
EDID	AUTO, 1024x768, 1280x1024, 1366x768,1600x900, 1920x1080,1920x1200,3840x2160
Blink	To set PWR flashing time, check TX connection status. You can choose from “Close, 1 min, 10 min, 30 min, 60 min, always”.
Scan time	10s, 20s, 30s, 60s, 90s ,120s, 150s, 180s, 210s, 255s



[Auto Scan Setting]

Select TX devices, click the QV item, and then click “” to automatically scan the selected device (default scan time: 10s).

admin Mode: Matrix RX-82220785f097


   

SN	Tx-List	Status	QV
1	TX-02db0b1a6633	no video	Scan
2	TX-0234b3616d6b	busy	Scan
3	TX-02da799ae375	--busy--	Scan
4	TX-02bf64e94952	connect	Scan
5			
6			
7			
8			
9			

 Total TX:4 

Scan time: 10s, 20s, 30s, 60s, 90s, 120s, 150s, 180s, 210s, 255s

[User Login Interface]

The default setting mode is “ password mode:  ”(See User Setting on Page 16), the login interface will only appear after clicking the icon .





UserName:

Password:

User Name:	admin
Password:	admin

[The list of matched TX/RX]

Click function key [], and then the following menu appears:


 admin
Mode: Matrix
RX-82220785f097
✕


TX	RX
TX-02db0b1a6633	RX-826d9539bf91
TX-0234b3616d6b	
TX-02da799ae375	RX-82220785f097
TX-02bf64e94952	RX-82bcf4d41966

When you see the device name in the TX list and the RX list, that means that the TX and RX are matched successfully.

3.2 Function Setting



Click the function key [], and then below menu appears:

 admin
Mode: Matrix
RX-82220785f097
✕

Operating mode: Matrix

system state: ✔ Usb ✔ Audio ✔ KM ✔ Share

Output timing: 1080p@60

Total TX: 4 Total RX:2

MAC: 82:22:7:85:f0:97

MID: 169-254-39-57

BID: 000000000000-0

Version: V7.5.11.18040ERD

Equipment info

Equipment setting

Frame push

Frame Get

Update

Hotkeys

Function Name	Description
Equipment Info	To switch on/off USB, Audio, KM, Get & Push
Equipment Setting	System and User Settings
Frame Push	Push the video and USB signals from current receiver to the chosen receiver in the list
Frame Get	Get the video and USB signals from any receiver in the list to the current receiver
Upgrade	Update device
Hotkey	Hotkeys of device


[Equipment Info]

Select to switch on/off the system state.

The screenshot shows a web interface for an IP KVM Matrix Extender. At the top, a light blue header bar contains a user icon labeled 'admin', the text 'Mode: Matrix', and the device ID 'RX-82220785f097'. A red close button is in the top right corner. The main content area is white and displays 'Operating mode: Matrix'. Below this, the 'system state:' section features four green checkmark icons next to the labels 'Usb', 'Audio', 'KM', and 'Share'. A pink rectangular box highlights these four items. Further down, the interface lists system details: 'Output timeing: 1080p@60', 'Total TX: 4 Total RX:2', 'MAC: 82:22:7:85:f0:97', 'MID: 169-254-39-57', 'BID: 000000000000-0', and 'Version: V7.5.11.18040ERD'. On the right side, a vertical sidebar menu is visible with a green header 'Equipment info' and several grey buttons: 'Equipment setting', 'Frame push', 'Frame Get', 'Update', and 'Hotkeys'. The bottom of the interface is a light blue bar.



Function Name	Description
Usb	USB function
Audio	Audio function
KM	Keyboard and Mouse
Share	Push video & Get video

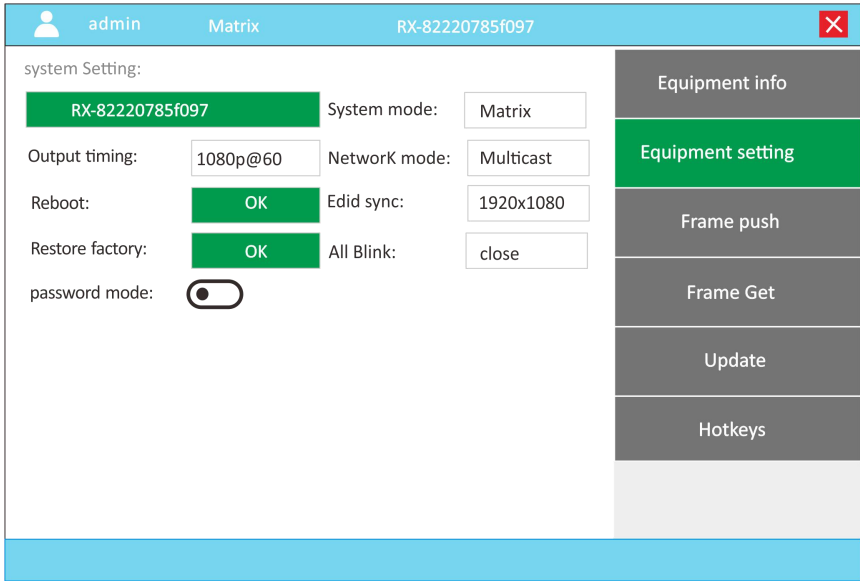[Equipment Setting]



Function Name	Description
RX-8220785f097	Click to change the name of RX, and then click “ESC” button to confirm your modification.
Output timing	Resolution 1080P@60, 1080P@50, 2160@30, 2160@25, 720P@60, 1366x768, 1440x900, 1920x1200, 1400x1050, AUTO PASS
Reboot	Reboot device
Restore factory	Restore factory defaults
System mode	Matrix mode P2P mode Node mode
Network mode	Multicast mode Unicast mode
Edid Sync	AUTO, 1024x768, 1280x1024, 1366x768, 1600x900, 1920x1080, 1920x1200, 2560x1440, 3840x2160
All Blink	To set PWR flashing time You can choose from “Close, 1 min, 10 min, 30 min, 60 min, always”.
Password mode	Modify user name and set permissions

User Setting:

Click “  ”, swipe right to “  ”, and then the following menu appears. You can modify user password and set permissions.

You can't set the user name and password in Node mode, they can be set on the management control unit.


system Setting:

RX-82220785f097 System mode: Matrix

Output timing: 1080p@60 NetworkK mode: Multicast

Reboot: OK Edid sync: 1920x1080

Restore factory: OK All Blink: close

password mode: 

Name	Password	Permissions
admin	admin	<input checked="" type="checkbox"/> Usb <input checked="" type="checkbox"/> Audio <input checked="" type="checkbox"/> KM
		<input checked="" type="checkbox"/> share
user	user	<input checked="" type="checkbox"/> Usb <input checked="" type="checkbox"/> Audio <input checked="" type="checkbox"/> KM
		<input type="checkbox"/> Share

Function Name	Description
Password	Double click the name in the password list to modify the password of corresponding user.
Permissions	Set permissions for USB, Audio, KM, Frame Get, and Frame Push.

[Frame Push]

admin Matrix RX-82220785f097			
SN	Rx-List	Push	
1	RX-826d9539bf91	Push	Equipment info Equipment setting Frame push Frame Get Update Hotkeys
2	RX-824970a75774	Push	
3	RX-82bcf4d41966	Push	
4			
5			
6			
7			
8			
9			
10			
11			
12			


Click [Push] to push the video and USB signals from current receiver to the chosen receiver in the list.

[Frame Get]


admin Matrix RX-82220785f097			
SN	Rx-List	Get	
1	RX-826d9539bf91	Get	Equipment info Equipment setting Frame push Frame Get Update Hotkeys
2	RX-824970a75774	Get	
3	RX-82bcf4d41966	Get	
4			
5			
6			
7			
8			
9			
10			
11			
12			

Click [Get] to get the video and USB signals from any receiver in the list to the current receiver.

Connection Diagram of Collaborative Sharing Push & Get

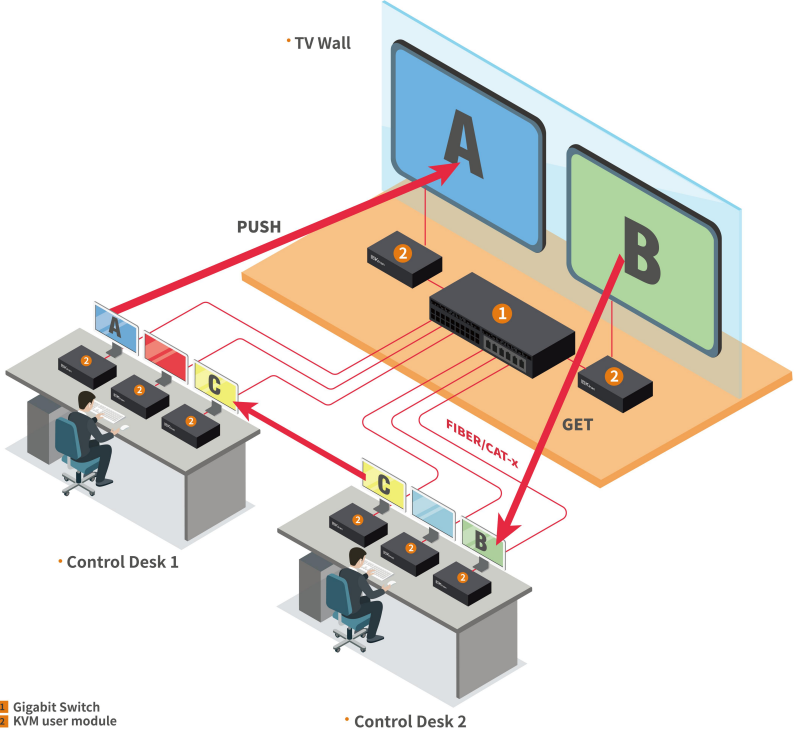


[Update]

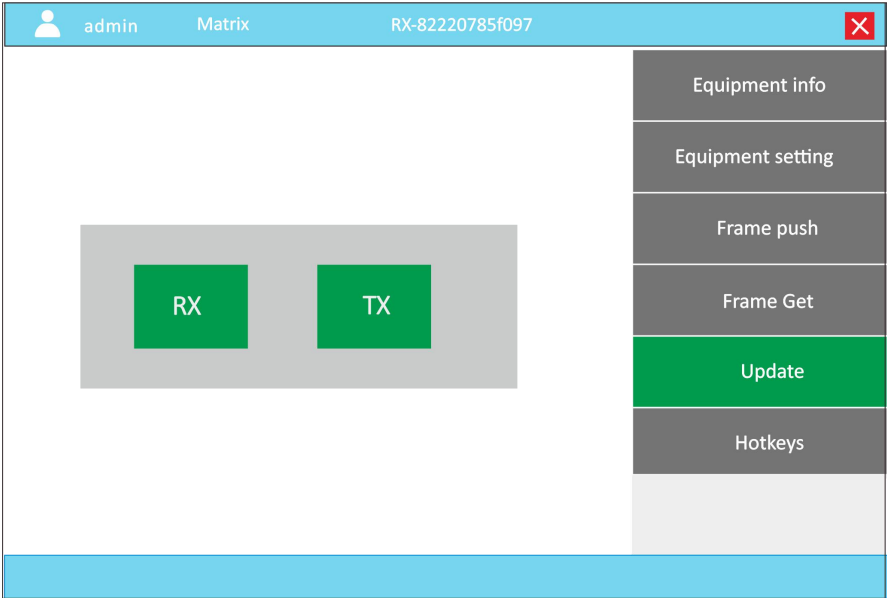

Click **【RX】** to update RX
Click **【TX】** to update TX

[Hotkeys]

 adminMatrixRX-82220785f097✕

Press the hotkey 3 time quickly

- left Ctrl ----> Shows or Hides the UI
- left Shift ----> Disconnect host
- right Ctrl ----> Next or previous channels

Switch hotkey

hold down right Ctrl+ double -click1-0 --> Switch from channel 1 to10

Equipment info

Equipment setting

Frame push

Frame Get

Update

Hotkeys

Function Name	Description
Left_Ctrl	Shows or Hides the UI
Left_Shift	Disconnect host
Right_Ctrl	Next or previous channels
Right_Ctrl+Doulbe 【1-0】	Switch from channel 1 to 10

4. Specifications

Specifications of KF251S

Specification		KFH251S_TX	KFH251S_RX
Connections	HDMI input	2	N/A
	HDMI output	2	2
	Power	12V	12V
	LAN port	RJ45 x 2	RJ45 x 2
	Optical Module	SFP+ x 1	SFP+ x 1
	Microphone	3.5MM Stereo Jack (Green)	3.5MM Stereo Jack (Pink)
	Speaker	3.5MM Stereo Jack (Pink)	3.5MM Stereo Jack (Green)
	Square USB	1	N/A
	USB 2.0	N/A	USB x 4
Resolution		3840x2160@30Hz	
Cable		CAT5e/6/7 or Optical Fiber Cable	
I/R value		DC12V / 2A	DC12V / 2A
Power consumption		12W	12W
Operating temperature		0—50 °C	
Storage temperature		-20—60 °C	
Humidity		0—80% RH, non-condensing	
Material		Metal	
Net weight(kg)		1 kg	1kg
Product dimension (W × D × H)		272 mm x 115.5 mm x 44mm	
Package dimension (W × D × H)		395 mm x 274 mm x 110mm	