

IP KVM Matrix Extender

User Manual

www.kinankvm.com

@all right reserved Shenzhen Kinan Technology Co., Ltd.

Print date: 2024 /11

Version: V1.1

User Information

Telephone Support

For telephone support, please call below number:

TEL	0086-755-26755041
MOBILE	0086-13714411566

User Notification

All information, documentation, and specifications contained in this manual are subject to change without prior notice. The manufacturer does not make any explicit or implied statement or guarantee about the contents of this document, especially for merchantability or fitness for any specific purpose. Any manufacturer's equipment described in this manual is sold or licensed as it is.

If the equipment is damaged artificially after purchase, the buyer (not the manufacturer, its distributor or reseller) shall bear all costs for necessary repair and any losses caused by equipment defects.

If the correct operating voltage setting is not selected before operation, the manufacturer will not be responsible for any damage caused by system operation.

Please make sure the voltage has been set correctly before use.

- User Information** 1
 - Telephone Support 1
- 1. Introduction** 3
 - 1.1 Function 4
 - 1.2 Feature 4
 - 1.3 Safety Instructions 4
 - 1.4 Product Overview 6
 - KFP286K receiver (TX) 6
 - KFP286K sender (RX) 7
- 2. Installation** 8
 - 2.1 Installation of Extender 8
- 3. Extender Configuration** 11
 - 3.1 Use of UI Interface 11
 - [Name Setting of TX_List] 12
 - [Auto Scan Setting] 13
 - [User Login Interface] 14
 - [The list of matched TX/RX] 14
 - 3.2 Function Setting 15
 - [Equipment Info] 16
 - [Equipment Setting] 17
 - [Frame Push] 19
 - [Frame Get] 19
 - [Update] 21
 - [Hotkeys] 22
- 4. Specifications** 23
 - Specifications of KFP286K 23

1. Introduction

The KFP286K IP KVM matrix extenders are highly optimized KVM extenders. The point-to-point connection supports transmission distance of 120m, and resolution up to 3840x2160@60Hz. This series of extenders can be connected to an 1G network switch to form a matrix switching system, which supports point-to-point (P2P) mode and matrix (Matrix) mode. The matrix switching system composed of extenders supports up to 9999 nodes by using a centralized management software, and it can support up to 40 nodes without using a centralized management software. It can connect multiple signal sources (such as servers, workstations, cameras and video walls).

With the matrix switching system, computers and servers can be located in the central server room far from the workstation to improve security, reduce the temperature and noise of the working environment, and achieve a quiet and friendly human-computer interaction environment.

The video compression algorithm of KFP286K matrix extender is a perfect combination of high-quality image and low latency (<8ms). The USB and video signals are transmitted through CAT5e/6/7 network cable.

It supports USB devices such as touch screen, USB sound card, printer, etc., it can also support USB storage devices.

1.1 Function

This product is intended to be used as a device to increase the distance that a keyboard, monitor and mouse can be placed from a computer. This product is intended for professional use. The product should not be used in potentially explosive environments.

The product may only be used according to the instructions as described in this manual. All use, other than that described in this manual, is seen as unintended use. In this product, the product connected to the host end is called the transmitter (TX), and the product connected to the display end is called the receiver (RX).

1.2 Feature

- Display Port / USB2.0/Audio - IP KVM Matrix Extender
- Dual screen version
- Point-to-point connection supports maximum extension distance 120m/394ft
- Support seamless switching
- Freeze the last image after the disconnection of transmitter and receiver
- Support resolution up to 3840x2160@60Hz (4:4:4)
- USB transmission rate up to 480Mbit/s
- Display Port lossless real-time full HD transmission
- Support transmission through fiber optic and network (CAT5e/6/7)
- Support one Administrator account and one User account
- Support remote computer power on and off

1.3 Safety Instructions


WARNING! Read and understand all safety instructions.

- Please follow all instructions. This will avoid accidents, fire, explosions, electric shocks or other hazards that may result in damage to property and/or severe or fatal injuries. Please ensure that everyone who uses the product has read and followed these warnings
- Keep all safety information and instructions for future reference and pass them on to subsequent users of the product.
- The manufacturer is not liable for cases of material damage or personal injury caused by incorrect handling or non-compliance with the safety instructions. In such cases, the warranty will be voided.

- The product is not allowed to use in potentially explosive environments.
- Check the product and the cables for any damage before use. If there is any visible damage, a strong odour, or excessive overheating of components unplug all the connections immediately and stop using the product.
- If the product is not installed and used in accordance with this manual, it may cause disruptive interference with radio or television reception or affect other electronic products in residential areas.
- Use shielded cables to connect components to avoid the above interference.
- Only the power adapter included with the product should be used as the power supply. Do not use other adapters.
- Make sure your local voltage matches the rating indicated on the product before powering on it.
- The product must be connected to a permanent and earthed AC wall socket.
- Protect cables from being strained, pinched or buckled and place them in a way to prevent people from tripping over the cord.
- Avoid any damage to power adapter.
- Use the product with a suitable, properly installed and easily accessible power socket to make sure the product can be disconnected from the power socket at all times.
- Disconnect the product when not in use.
- Never touch the adapter with wet hands.
- Use the product within the specified performance limits.
- Keep the product away from any flammable materials like curtains.
- Protect the power adapter from use by third parties (particularly children).
- Keep the product away from heater.
- Do not drop or hit the product.


1.4 Product Overview

KFP286K receiver (TX)

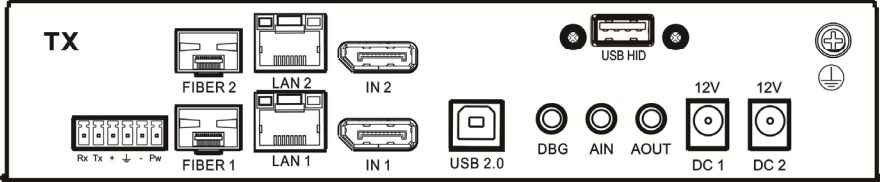

No.	Components	Description	
1	LED	POWER	Power indicator
		FIBER	Connection indicator of FIBER
		LINK	Connection indicator
		SLED	System indicator
2	USB HID	connect to PC or server	
3	Rx Tx + ↓ - Pw	Reserved interfaces	
4	FIBER2, FIBER1	Fiber interface	
5	LAN2, LAN1	LAN interface	
6	IN2, IN1	Display Port video input	
7	USB 2.0	USB-B, connect to PC or server	
8	DUG	Debug interface	
9	AIN	Audio input	
10	AOUT	MIC output	
11	DC1, DC2	Connect to the 12V power supply	
12		Ground the device	

KFP286K sender (RX)

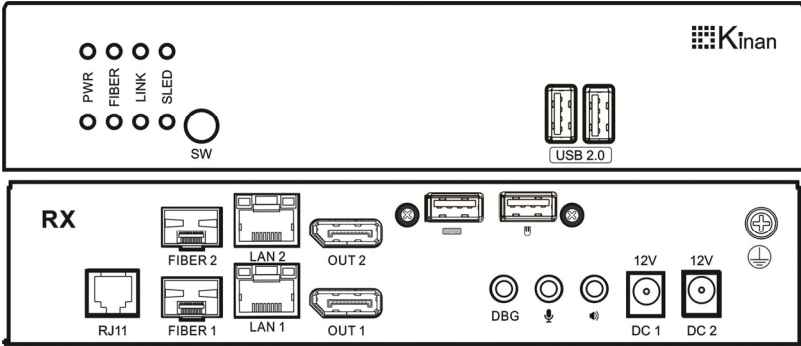

No.	Components		Description
1	LED	POWER	Power indicator
		FIBER	Connection indicator of FIBER
		LINK	Connection indicator
		SLED	System indicator
2	SW		Remote power on/off button
3	USB2.0		Connect to USB2.0 peripherals
4			Connect to a USB keyboard
5			Connect to a USB mouse
6	RJ11		Reserved interfaces
7	FIBER2, FIBER1		Fiber interface
8	LAN2, LAN1		LAN interface
9	OUT2, OUT1		DisplayPort video output
10	DBG		Debug interface
11			MIC input
12			Audio output
13	DC1, DC2		Connect to the 12V power supply
14			Ground the device


*SW key: The “- +” interface of [Rx Tx + ⚡ - Pw] on Transmitter end is required to connect to the computer and the computer need to be set up.

2. Installation


2.1 Installation of Extender

Warning! Please read and be aware of all safety instructions before installing the equipment. The extender can be set as a point-and-point mode to access a single PC, and also can access multiple PCs through matrix switching system.

Matrix switching system

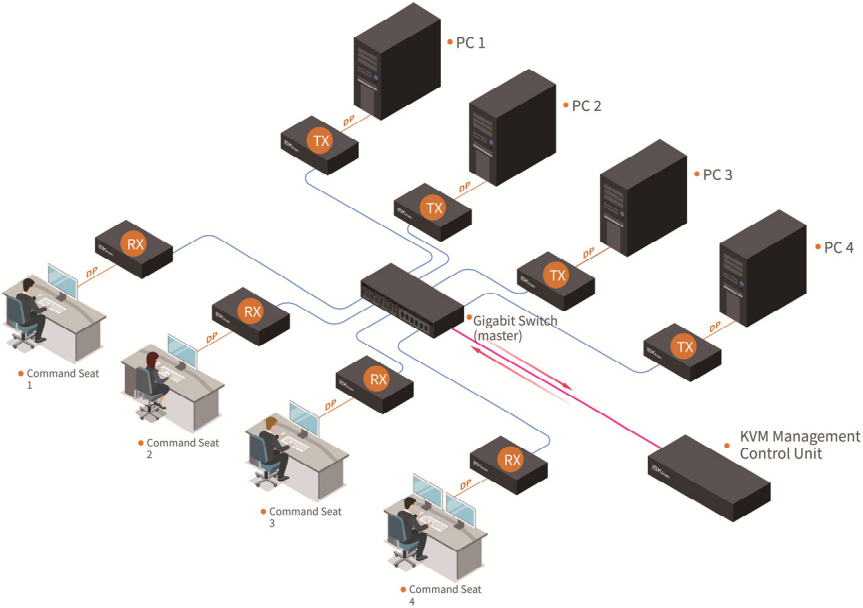


Connection Diagram of KFP286K

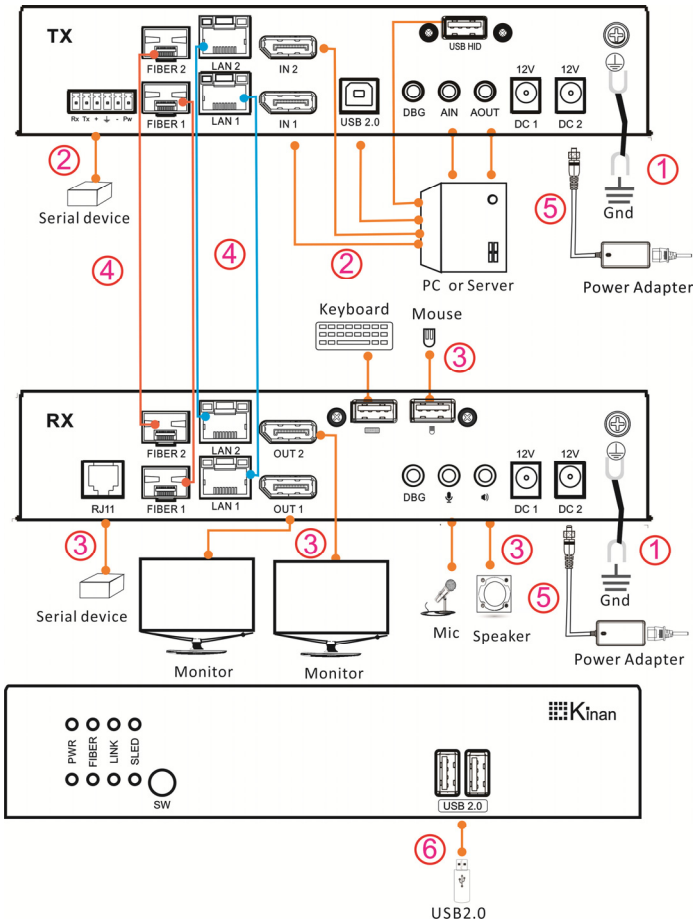

1. Make sure the KVM extender is grounded (See ① in the above diagram)
2. Connect the KFP286K_TX to the DisplayPort video port, USB port and audio port of a computer. (See ② in the above diagram)
3. Connect the KFP286K_RX to keyboard, mouse, monitor and audio device. (See ③ in the above diagram)
4. Connect the transmitter and receiver interfaces via optical fiber or CAT5E cable. (See ④ in the above diagram)
5. Power on the transmitter and receiver. (See ⑤ in the above diagram)
6. Connect the USB peripheral to the receiver (KFP286K_RX) (See ⑥ in the above diagram)

Matrix Connection Diagram

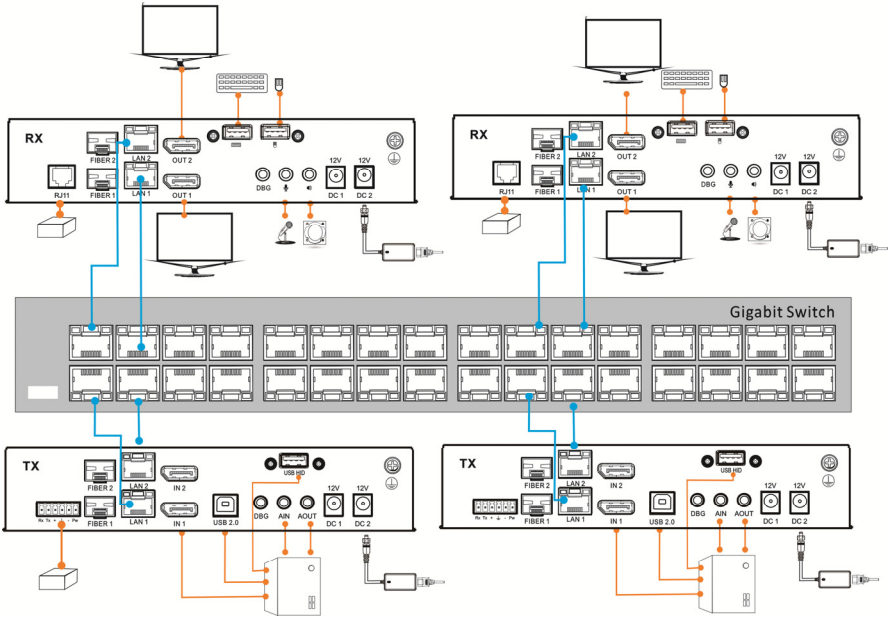








Configuration requirements: The electrical port of the network switch must reach a gigabit rate and support IGMP multicast.

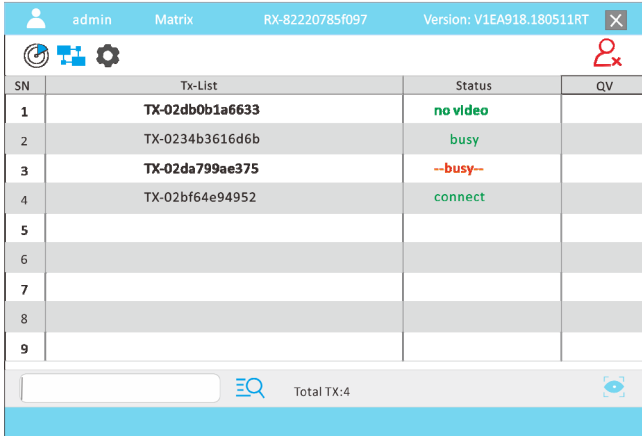3. Extender Configuration

3.1 Use of UI Interface


Press the left [Ctrl] key on the keyboard 3 times continuously, then the main UI interface will display.



Function Name	Description
Mode	Node Matrix P2P
	Scan device list
	The list of matched transmitter and receiver
	Setting of function key
	Click 【Equipment setting】 - 【User Setting Pass】 to logout user account
SN	Number of connected devices
TX_List	List of transmitters
Status	Busy: TX and RX are paired --Busy-- : The RX has been connected to a TX No video: There is no video input from the host Connect: Can be connected
QV	Select Scan device
	Find the devices in the list
	Auto Scan


[Name Setting of TX_List]

Double-click the name of a TX, and then the following name setting window appears.

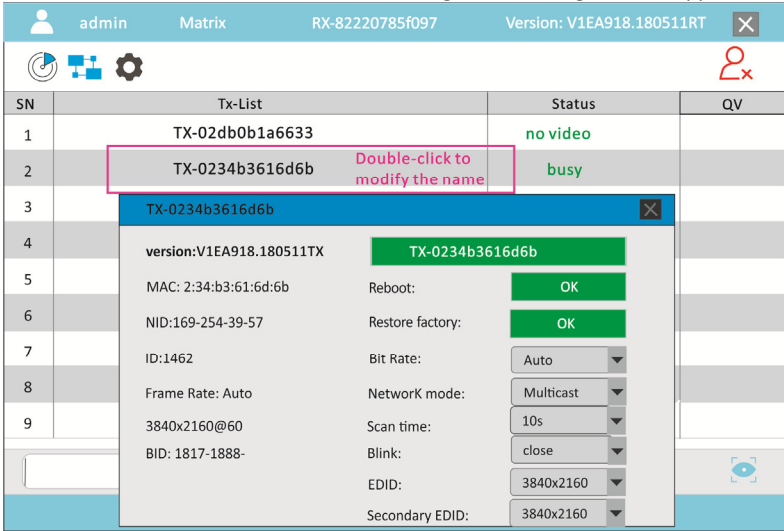





Function Name	Description
TX-0234b3616d6b	Click to change the name of TX, and then click “ESC” button to confirm your modification.
Reboot	Reboot the device
Restore factory	Restore Factory Defaults
Bit Rate	Auto, 10M ,50M, 100M, 150M, 200M
Network mode	Multicast mode Unicast mode
Scan time	10s, 20s, 30s, 60s, 90s ,120s, 150s, 180s, 210s, 255s
Blink	To set PWR flashing time, check TX connection status. You can choose from “Close, 1 min, 10 min, 30 min, 60 min, always”.
EDID	AUTO, 1024x768, 1280x1024, 1366x768, 1600x900 , 1920x1080, 1920x1200, 2560x1440, 3840x2160, 1152x864, 2048x2048,1600x1200,1920x1920, 2160x2160, 2560 x1600, 3840 x1080, 4096 x1080, 2560 x2880
Secondary EDID	AUTO, 1024x768, 1280x1024, 1366x768, 1600x900 , 1920x1080, 1920x1200, 2560x1440, 3840x2160, 1152x864, 2048x2048,1600x1200,1920x1920, 2160x2160, 2560 x1600, 3840 x1080, 4096 x1080, 2560 x2880



[Auto Scan Setting]

Select TX devices, click the QV item, and then click “

admin Matrix RX-82220785f097 Version: V1EA918.180511RT



   

SN	Tx-List	Status	QV
1	TX-02db0b1a6633	no video	Scan
2	TX-0234b3616d6b	busy	Scan
3	TX-02da799ae375	--busy--	Scan
4	TX-02bf64e94952	connect	Scan
5			
6			
7			
8			
9			

 Total TX:4 

Scan time: 10s, 20s, 30s, 60s, 90s, 120s, 150s, 180s, 210s, 255s


[User Login Interface]


The default setting mode is “password mode: ” (See User Setting on Page 18), the login interface will only appear after clicking the icon .



User Name:	admin
Password:	admin

[The list of matched TX/RX]


Click function key [], and then the following menu appears:

admin Matrix RX-82220785f097 Version: V1EA918.180511RT 	
TX	RX
TX-02db0b1a6633	RX-826d9539bf91
TX-0234b3616d6b	
TX-02da799ae375	RX-82220785f097
TX-02bf64e94952	RX-82bcf4d41966

When you see the device name in the TX list and the RX list, that means that the TX and RX are matched successfully.

3.2 Function Setting




Click the function key [], and then below menu appears:

The screenshot shows a web interface for an IP KVM Matrix Extender. At the top, there is a header bar with a user icon, the text 'admin Matrix', the device ID 'RX-82220785f097', the version 'Version: V1EA918.180511RT', and a close button. Below the header, the main content area displays 'Operating mode: Matrix' and 'system state:'. Under 'system state', there are four green checkmarks indicating that 'Usb', 'Audio', 'KM', and 'Share' are all enabled. Below these, the following system information is listed: 'Output timeing: 1080p@60', 'Total TX: 4 Total RX:2', 'MAC: 82:22:7:85:f0:97', 'MID: 169-254-39-57', 'BID: 823A121131B6-0', and 'Version: V1EA918.180511RT'. On the right side of the main content area, there is a vertical menu with the following items: 'Equipment info' (highlighted in green), 'Equipment setting', 'Frame push', 'Frame Get', 'Update', and 'Hotkeys'.

Function Name	Description
Equipment Info	To switch on/off USB, Audio, KM, Get & Push
Equipment Setting	System and User Settings
Frame Push	Push the video and USB signals from current receiver to the chosen receiver in the list
Frame Get	Get the video and USB signals from any receiver in the list to the current receiver
Upgrade	Update device
Hotkey	Hotkeys of device


[Equipment Info]

Select to switch on/off the system state.

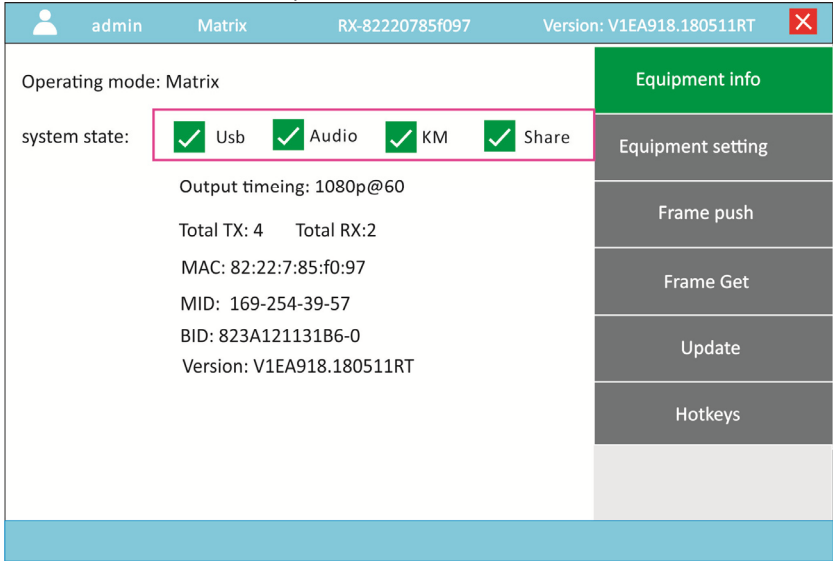



Function Name	Description
Usb2.0	USB2.0 function
Audio	Audio function
KM	Keyboard and Mouse
Share	Push video & Get video

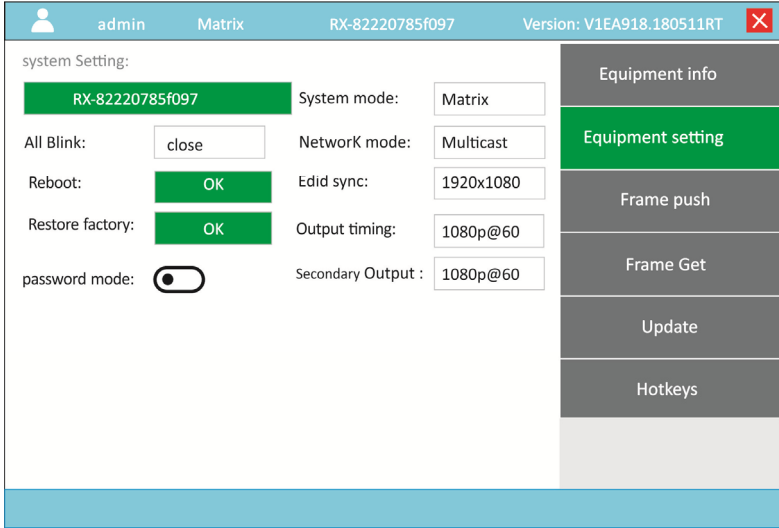[Equipment Setting]



Function Name	Description
RX-8220785f097	Click to change the name of RX, and then click “ESC” button to confirm your modification.
All Blink	To set PWR flashing time You can choose from “Close, 1 min, 10 min, 30 min, 60 min, always”.
Reboot	Reboot device
Restore factory	Restore factory defaults
System mode	Matrix mode P2P mode Node mode
Network mode	Multicast mode Unicast mode
Edid Sync	AUTO, 1024x768, 1280x1024, 1366x768, 1600x900 , 1920x1080, 1920x1200, 2560x1440, 3840x2160, 1152x864, 2048x2048,1600x1200,1920x1920, 2160x2160, 2560 x1600, 3840 x1080, 4096 x1080, 2560 x2880
Output timing Secondary output	1080P@60, 2160P@60, 640 x 480P@60, 800x600P@60 1024 x 768P@60,1280 x1024P@60, 1366x768, 1440x900 , 1920x1200, STRICT PASS, AUTO PASS
Password mode	Modify user name and set permissions




User Setting:

Click “”, swipe right to “”, and then the following menu appears. You can modify user password and set permissions.

You can't set the user name and password in Node mode, they can be set on the management control unit.




Function Name	Description
Password	Double click the name in the password list to modify the password of corresponding user.
Permissions	Set permissions for USB2.0, Audio, KM, Frame Get, and Frame Push.

[Frame Push]

SN	Rx-List	Push	
1	 RX-826d9539bf91	Push	<ul style="list-style-type: none">Equipment infoEquipment settingFrame pushFrame GetUpdateHotkeys
2	 RX-824970a75774	Push	
3	 RX-82bcf4d41966	Push	
4			
5			
6			
7			
8			
9			
10			
11			
12			


Click [Push] to push the video and USB signals from current receiver to the chosen receiver in the list.

[Frame Get]


SN	Rx-List	Get	
1	 RX-826d9539bf91	Get	<ul style="list-style-type: none">Equipment infoEquipment settingFrame pushFrame GetUpdateHotkeys
2	 RX-824970a75774	Get	
3	 RX-82bcf4d41966	Get	
4			
5			
6			
7			
8			
9			
10			
11			
12			

Click [Get] to get the video and USB signals from any receiver in the list to the current receiver.

Connection Diagram of Collaborative Sharing Push & Get

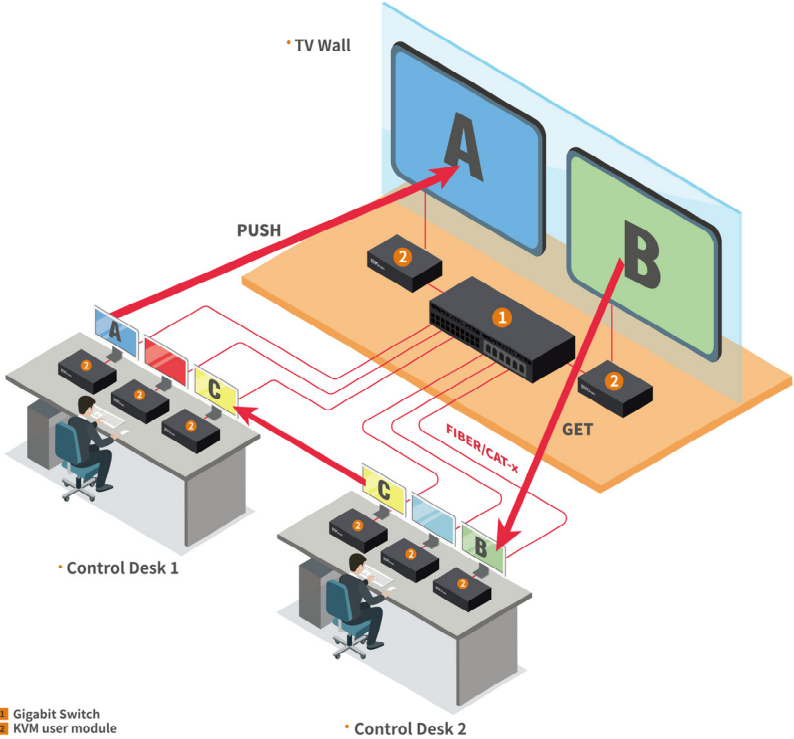

[Update]

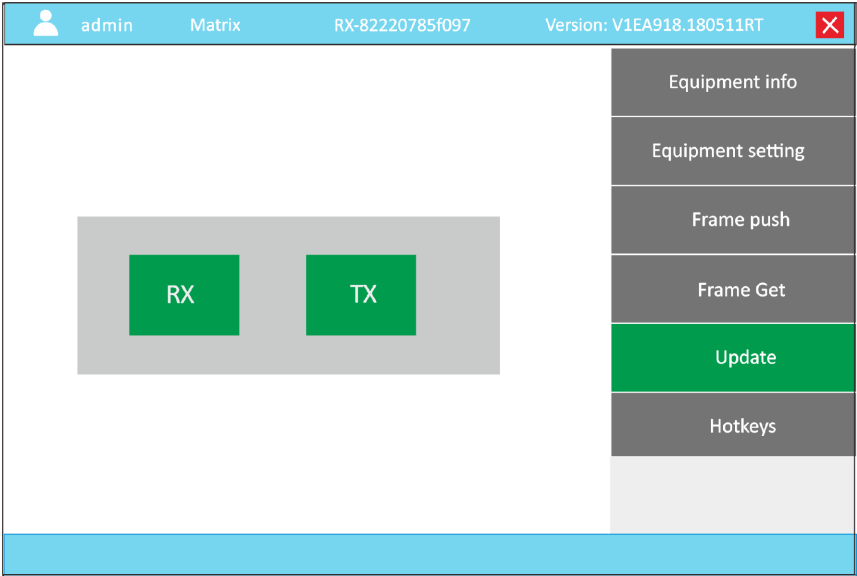

Click **【RX】** to update RX

Click **【TX】** to update TX

[Hotkeys]

Function Name	Description
Left_Ctrl	Shows or Hides the UI
Left_Shift	Disconnect host
Right_Ctrl	Next or previous channels
Right_Ctrl+Doulbe 【1-0】	Switch from channel 1 to 10

4. Specifications

Specifications of KFP286K

Specifications		KFP286K_TX	KFP286K_RX
Connections	DisplayPort input	2	N/A
	DisplayPort output	N/A	2
	Power	2x 12V	2x 12V
	LAN port	2x RJ45	2x RJ45
	Optical Module	2x SFP+	2x SFP+
	Mic	3.5mm Stereo Jack (Green)	3.5mm Stereo Jack (Pink)
	Speaker	3.5mm Stereo Jack (Pink)	3.5mm Stereo Jack (Green)
	Square USB	1	N/A
	USB	1	4
Resolution		3840x2160@60Hz	
Cable		CAT5e/6/7 or Optical Fiber Cable	
I/R Value		DC12V / 3A	DC12V / 3A
Power consumption		15W	16W
Operating temperature		0—50 °C	
Storage temperature		-20—60 °C	
Humidity		0—80% RH, non-condensing	
Material		Metal	
Net weight(kg)		0.94 kg	0.94kg
Product dimension (W × D × H)		212mm x 124.3 mm x 44mm	
Package dimension (W × D × H)		243mmx 209mm x 98mm	243mmx 209mm x 98mm